

UV-C DISINFECTION SYSTEMS

Fight germs with the power of
UV-C Germicidal Lamps






PROVEN DISINFECTION METHODOLOGY

Breakdowns the DNA RNA
Structure of Pathogens

WHAT IS UV-C LIGHT?

Esthetica's Disinfection Systems use UV-C light which is a proven disinfection tool against harmful bacteria, viruses, molds and spores.


It's radiations of 254nm wavelength damage the DNA code or RNA of these pathogens and trigger lethal mutations that prevent them from reproducing.

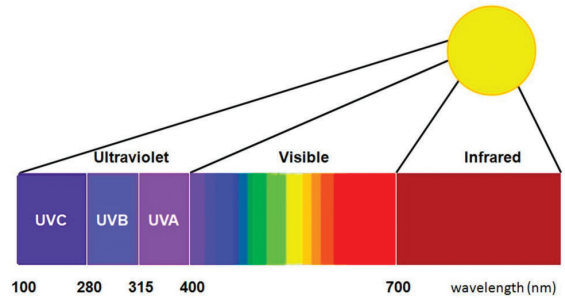

BENEFITS OF UV-C LIGHT

Esthetica's UV-C Disinfection Systems are fast, effective, eco-friendly and easy to use. Along with your conventional cleaning tools & methods, use Esthetica's UV-C Disinfection System to sanitize your working & living environment and make it more safe.

The best part is that the entire process does not leave any residue and hence there is no need to remove or neutralize any harmful agent after the disinfection process. Since no chemicals are being added to the Air & Water there are no harmful toxic chemicals that have to be disposed off.

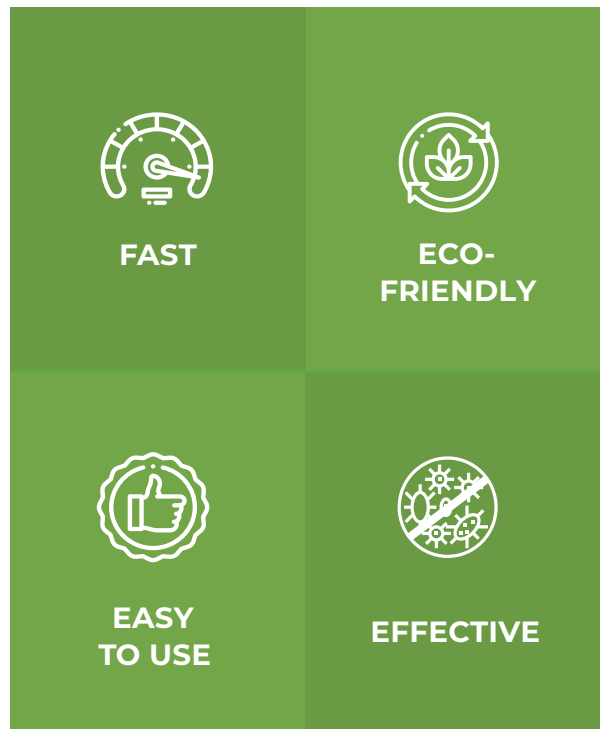

SAFETY PRECAUTIONS

The only precaution that needs to be taken while using these systems is that the area to be disinfected should be completely screened off. There should

be no plants, humans or pet animals when the disinfecting is in process as the ultraviolet rays emitted during it are harmful to skin and eyes.

APPLICATION OF UV-C DISINFECTION SYSTEMS


The UV-C Light has widespread applications and can be used to reduce the risk of virus & bacteria transmissions in your environment.

- Home
- Hospital
- Office Spaces
- Spa
- Clinics
- Hotels
- Salon
- Labs
- Supermarket
- Gym
- Ambulance
- Factories



OVERVIEW OF THE UV-C DISINFECTION TOWER

PRODUCED UNDER THE
MAKE IN INDIA INITIATIVE

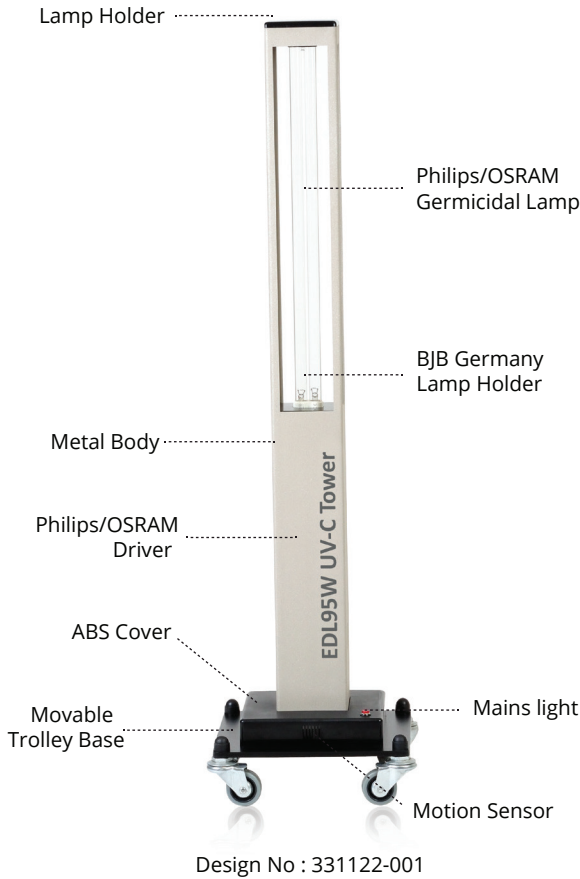

TECHNICAL SPECIFICATIONS

Model	EDL55W	EDL95W
Lamp Type	UVC	UVC
Safety Feature	Wi Fi/ Digital Timer Motion Sensor Delay Start	Wi Fi/ Digital Timer Motion Sensor Delay Start
Operating Voltage	220V/50Hz	220V/50Hz
Operating Power	55W	95W
Digital Timer	1-99 Minutes	1-99 Minutes
Dimensions	Base – 28x28, Height 109 cm	Base – 28x28, Height 109 cm
Weight	13.25 Kgs	13.25 Kgs

SAFETY FEATURES



DELAY START OF 15 SECS

This feature allows you 15 seconds to leave the area before the UV-C lamp turns on.



MOTION SENSOR

Motion Sensor deactivates the UV-C Lamp on detecting any movement within its range of 6-8 meters. When no movement detected for few seconds, it restarts the lamp.



WI-FI / DIGITAL TIMER

Esthetica's UV-C Disinfection systems are supplied with a Wi-Fi socket to control the system wirelessly through a mobile application. You can turn off or turn on the UV-C Disinfection system from remote distance. Schedule the on & off times through mobile application or set timer.



FOR MORE INFORMATION

Write to us at: info@spafurniture.in | Call us: +91 9873144051